


Heli_outer_loop

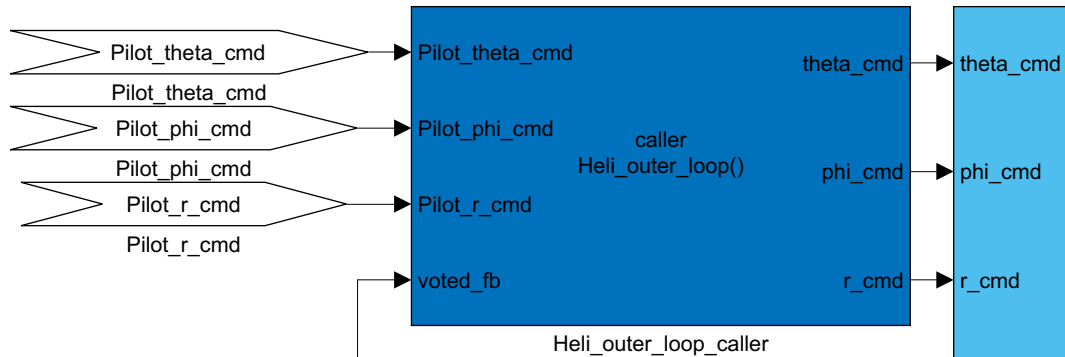


Heli_inner_loop


f()

AHRS_control

This module encapsulates the AHRS loop control modules.

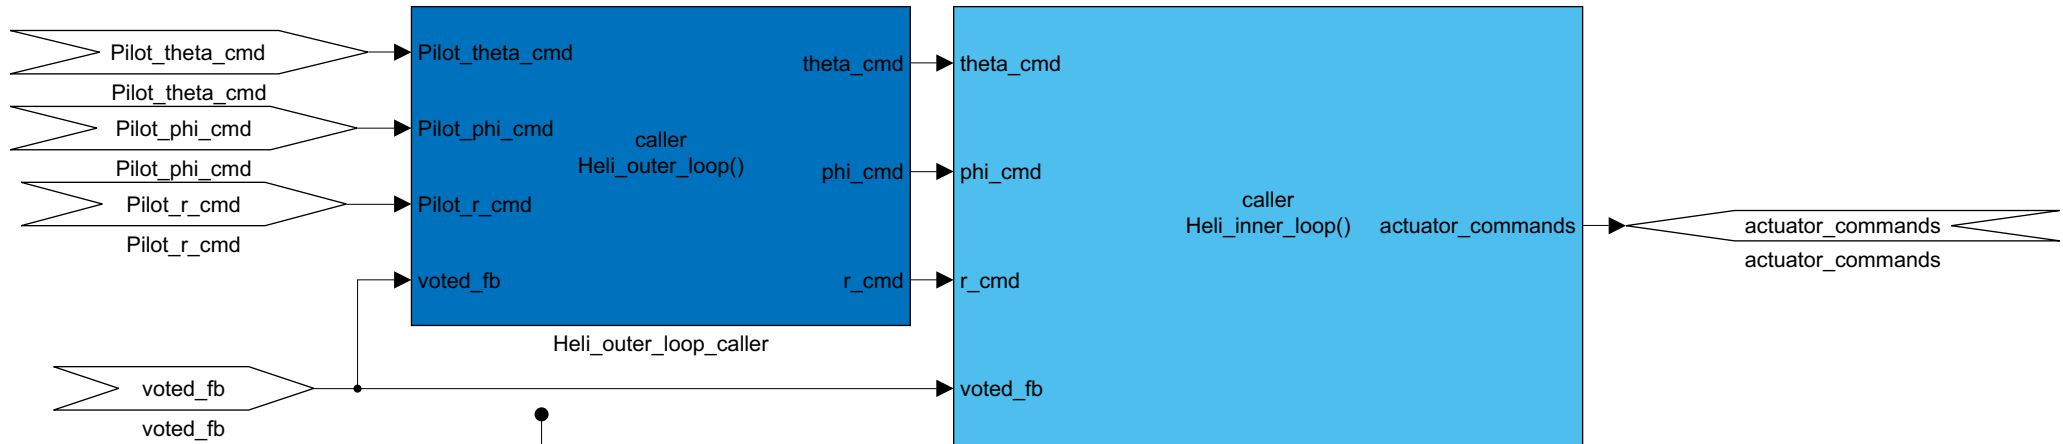

Heli_outer_loop_caller

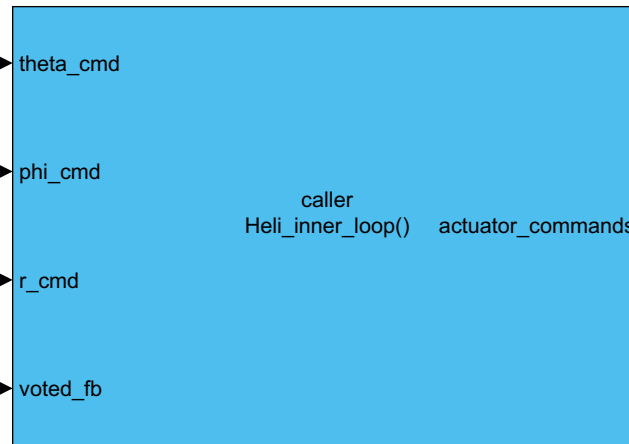

Heli_inner_loop_caller

actuator_commands
actuator_commands